



PICTURE 1

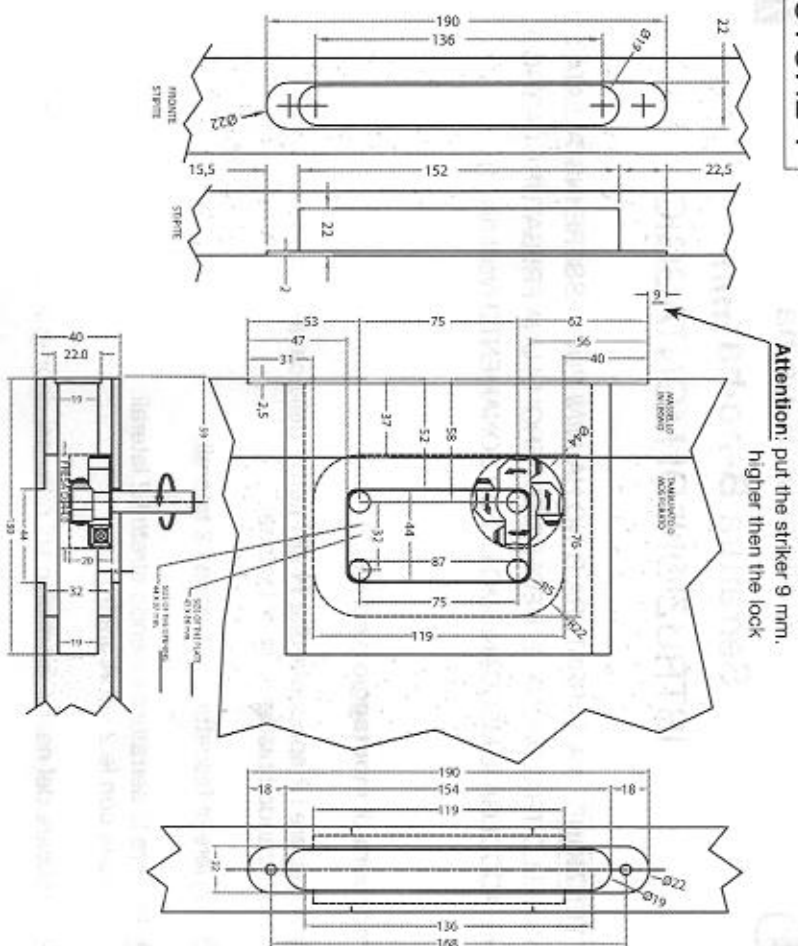

PICTURE 2

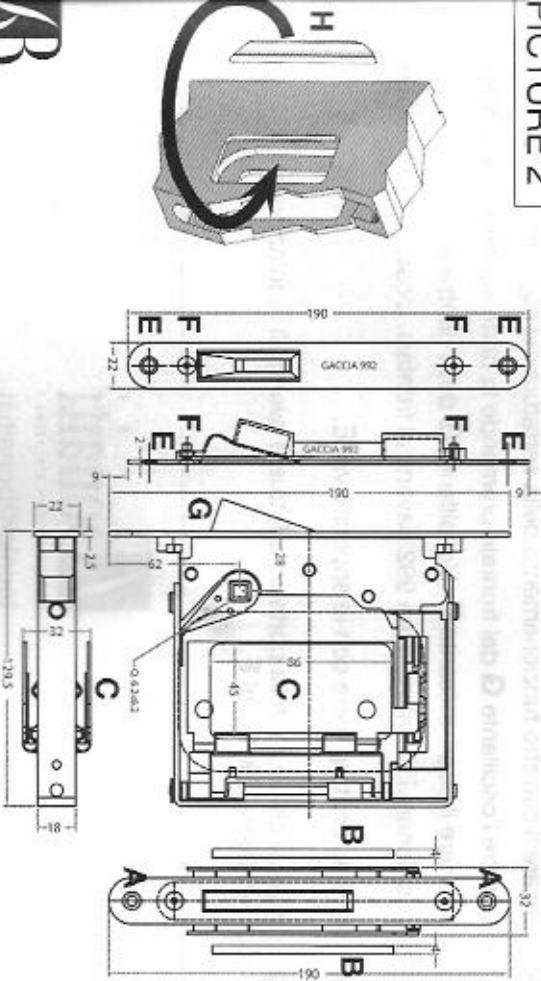

B-no ha Collection B-no-ha mini lock ASSEMBLING INSTRUCTIONS

ATTENTION THE B-NO.HA MINI LOCK CAN BE FITTED ON A TRADITIONAL DOOR, IT NEEDS A PARTICULAR MILLING IN ORDER TO CREATE THE SPACE FOR THE DEVICE MECHANISM (picture n.1).

Assembling procedure (picture n. 2)

- 1 Apply two fingerslots **H** in seat (use bi-adhesive tape included in the kit).
- 2 Remove the band which blocks the 2 sides.
- 3 Insert the lock holding the 2 sides tight.
Fix it with the 2 screws **A** on the frontal.
- 4 Put bi-adhesive tape on the back of plate-covers **B**.
- 5 Stick the first plate-cover on board **C** of plate keeping pressed the other plate on opposite side. Repeat operation for the second plate-cover.
- 6 Verify the correct lock working as follows:
 - a) Take the oscillating latch **G** out of frontal by pressing its upper side
 - b) Engage the plate-cover **B**. The latch **G** must return
 - c) Put the striker 992 opposite the frontal. The oscillating latch **G** must come out.
- 7 Fix the striker with the suitable screws **E**.
- 8 Check the door closing and eventually do the necessary regulations on striker acting on screws **F**.